BOOMPILOT[®] INSTALLATION MANUAL

Automatic boom section control installation manual for use with Amazone Amatron+ & Amatron 3 controllers w/Matrix[®] Pro







Copyrights

© 2014 TeeJet Technologies. All rights reserved. No part of this document or the computer programs described in it may be reproduced, copied, photocopied, translated, or reduced in any form or by any means, electronic or machine readable, recording or otherwise, without prior written consent from TeeJet Technologies.

Trademarks

Unless otherwise noted, all other brand or product names are trademarks or registered trademarks of their respective companies or organizations.

Limitation of Liability

TEEJET TECHNOLOGIES PROVIDES THIS MATERIAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED. NO COPYRIGHT LIABILITY OR PATENT IS ASSUMED. IN NO EVENT SHALL TEEJET TECHNOLOGIES BE LIABLE FOR ANY LOSS OF BUSINESS, LOSS OF PROFIT, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS, OR FOR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND, EVEN IF TEEJET TECHNOLOGIES HAS BEEN ADVISED OF SUCH DAMAGES ARISING FROM TEEJET TECHNOLOGIES SOFTWARE.

Safety Information

TeeJet Technologies is not responsible for damage or physical harm caused by failure to adhere to the following safety requirements.

As the operator of the vehicle, you are responsible for its safe operation.

The BoomPilot is not designed to replace the vehicle's operator.

Do not leave a vehicle while the BoomPilot is engaged.

Be sure that the area around the vehicle is clear of people and obstacles before and during engagement.

The BoomPilot is designed to support and improve efficiency while working in the field. The driver has full responsibility for the quality and work related results.

Disengage BoomPilot before operating on public roads or when not in use to prevent loss of vehicle control.

Table of contents

IN	RODUCTION TO MATRIX PRO GS - BOOMPILOT	2				
Prir	Principle of operation					
Fea	Features					
Sof	tware version2					
RE	QUIRED COMPONENTS	2				
INS	STALLATION	5				
1.	CONSOLE					
2.	ANTENNA					
3.	BOOMPILOT INTERFACE					
4.	CAN/POWER/DATA CABLE & CAN TERMINATION					
5.	POWER					
6.	COMPLETE ELECTRONIC INSTALLATION					
TR	TRANSPORT MODE NOTES 8					
SYSTEM CHECK 9						
	Amatron					
	Matrix Pro GS9					

INTRODUCTION TO MATRIX PRO GS - BOOMPILOT

Principle of operation

The Matrix Pro GS controls the sprayer according to the GPS position as well as the GPS guidance to avoid overlaps or skips. The Matrix Pro GS controls the sprayer in automatic mode and monitor the sprayer in manual mode. The operator is always able to override the control of the sprayer via the master key on the Amatron rate controller.

Features

Item

A

В

С

D

The Matrix Pro GS and the Amazone BoomPilot interface, in combination with Amatron+ or Amatron-3, adds 'Automatic boom section control' to Amazone sprayers.

REQUIRED COMPONENTS

Unpack the installation kit and identify the required parts for your installation. Part Number Description Quantity 90-xxxxx* Matrix Pro GS guidance controller kit1 Power/CAN/Data cable w/COBO connector.....1 45-05826 90-02883 15 05010 Harnoss Amazona Interface

	45-05919	namess, Amazone intenace	
	78-05108	Interface, Amazone BoomPilot1	
	98-05328	Installation manual, Amazone Amatron+ / Amatron-3 Controller1	
)	45-08101	CAN bus termination1	

*Part number is dependent on kit contents

Item	Part #	Description		Illustration
A	Part number is dependent on kit contents	Matrix Pro GS guidance controller kit		Matrix Pro 570G
В	45-05826	Power/CAN/data cable w/COBO connector.		
	90-02883	Amatron+ / Am Interface with h	atron-3 BoomPilot arness.	
С		45-05919	Harness, Amazone Interface	
		78-05108	Interface, Amazone BoomPilot	
		98-05328	Installation manual, Amazo	one- Amatron+ / Amatron-3 Controller.
D	45-08101	CAN bus termination.		


Software version

The Amatron and the Matrix Pro GS communicates via a special interface using the Amaclick CAN bus protocol. The software version in the Amazone job-computer must be v7.07.16 or higher. If the job-computer software is older than 7.07.12, please contact your Amazone dealer.

NOTE: Messages on AMABUS system as to if the BOOM/TOWER is active/inactive while in the transport position were not implemented prior to version 7.07.12.




The Amazone system can include a joy-stick or/and a Amaclick switch box, so your system may vary from the system overview drawing, see the possible combinations on the next page.

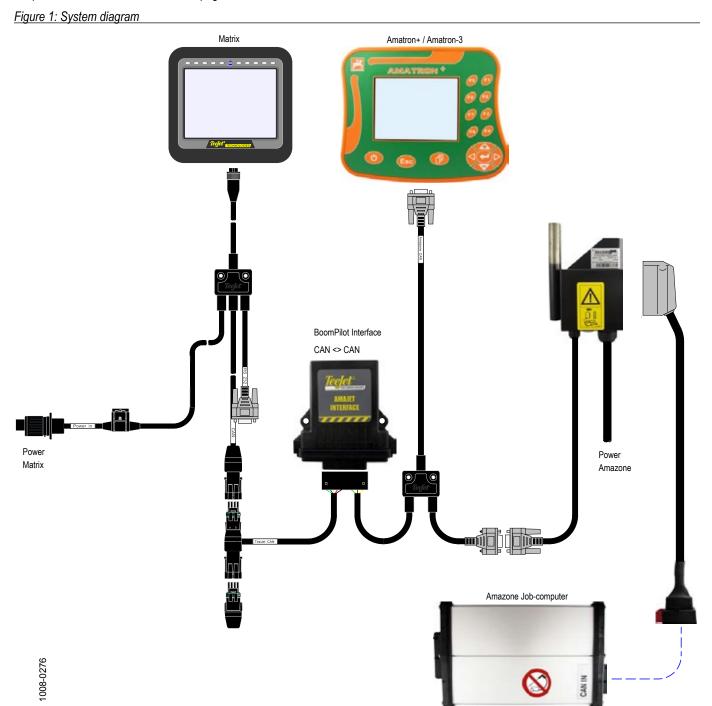

The TeeJet BoomPilot interface communicates with the Amatron via the Amaclick protocol using the same CAN bus-id. The Amaclick and the BoomPilot interface cannot be connected at the same time.

AMACLICK is an optional ergonomic CAN bus switch box, typical used in special crops which often require manual on/off control of the individual sections. When the BoomPilot interface is connected, manual on/off control of the individual sections must be done via the joy-stick or Amatron.

Figure 2: Possible combinations

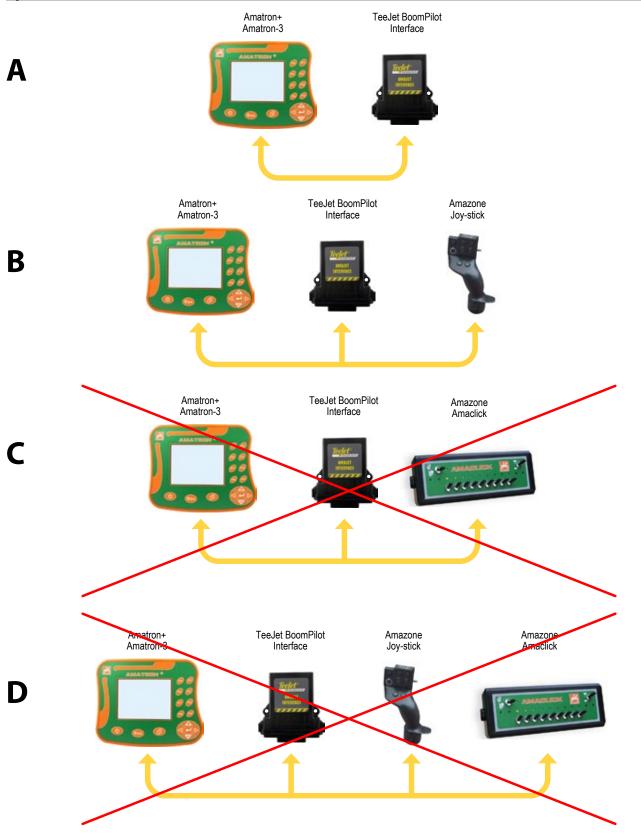



INSTALLATION

If there are questions concerning the installation of the BoomPilot system on this vehicle, or due to the changes in component specifications the parts supplied in the kit are not exactly as presented in this document, please contact your dealer or TeeJet Customer service representative for clarification before installation. TeeJet Technologies is not responsible for misuse or incorrect installation of the system.


NOTE: All references to left and right are stated as if the user is seated in the driver's seat.

NOTE: BE VERY CAREFUL TO ABSOLUTELY SECURE ALL CABLES THAT THEY DON'T INTERFERE WITH THE MANY MOVING PARTS OF THE MACHINE.

1. CONSOLE


A secure, mechanical mounting solution needs to be employed for permanent mounts within an operating vehicle.

Figure 3: Recommended console placement

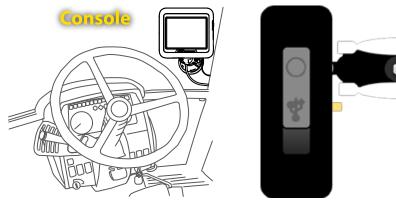

2. ANTENNA

The GPS Antenna base is magnetic. Position the antenna in the centre of the vehicle at the highest point with a clear view of the sky. A metal plate with adhesive strips has been included in the kit for easy mounting and installation.

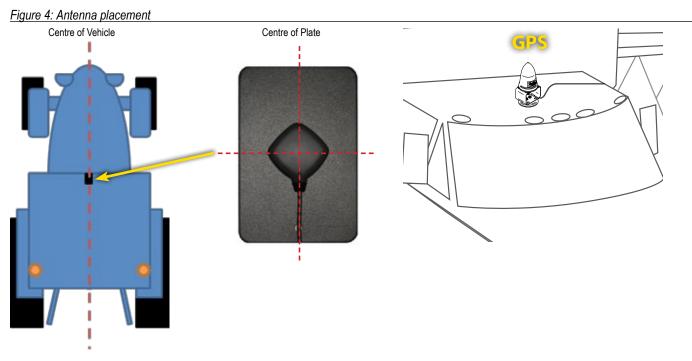

It is STRONGLY recommended to use this metal plate underneath the antenna as it will improve signal acquisition. Once the antenna has been positioned, route the antenna cable carefully to avoid damage.

3. BOOMPILOT INTERFACE

Connect the BoomPilot interface cable to the Amazone CAN bus, as the last item before the Amatron controller.

Figure 5: BoomPilot interface cable to the Amazone CAN bus


Amatron+ / Amatron-3

4. CAN/POWER/DATA CABLE & CAN TERMINATION

Connect the BoomPilot interface cable to the TeeJet CAN bus via the CAN/Power/Data cable. The CAN bus termination ends the CAN bus.

The TeeJet system can include other CAN bus modules like camera selector module or similar, so the your system may vary from the picture shown in the example.


Figure 6: CAN/Power/data cable & CAN termination

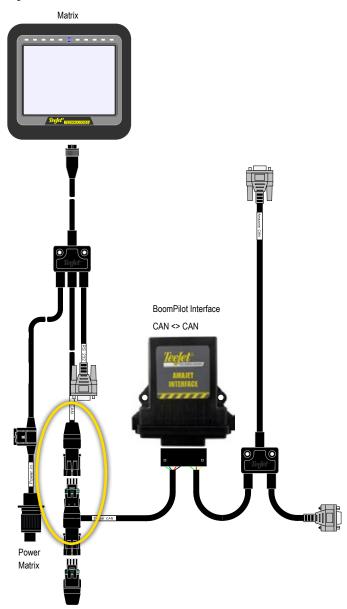

5. POWER


Connect the Matrix Pro GS to constant power via the 3P connector (Only the big pins no. 15/30 and no. 31 are used).

Warning: When connecting the system to 12V power it's very important that the polarity is correct, if not the system will be damaged.

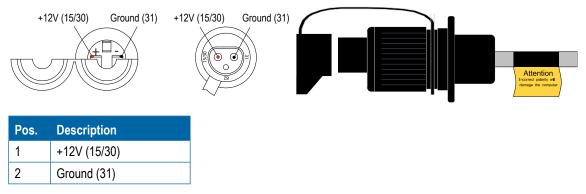

Optional Battery Cable

If your tractor doesn't support two power sockets, TeeJet offer an 'Y-Power cable', PN 198-332 (Contact your TeeJet dealer).

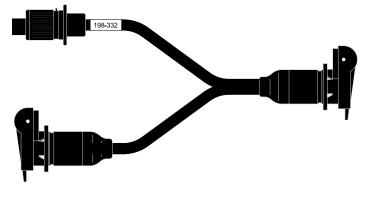

6. COMPLETE ELECTRONIC INSTALLATION


Refer to the Matrix Pro GS BoomPilot Setup in the full user manual for further instructions on setting up and using your Matrix Pro GS for automatic boom section control.

If not using a Matrix Pro GS, please refer to the owner's manual supplied with the guidance system to complete the electronic installation and setup.

TRANSPORT MODE NOTES

When in transport mode with the boom locked and tower locked, all jobs on the Matrix Pro GS console should be closed.

Figure 7: Amatron work screen with boom locked and tower locked

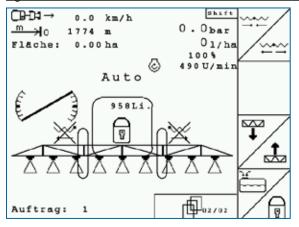



SYSTEM CHECK

After connecting to power, it is time to make a system check. To check the system, it is necessary to have full GPS signal, the vehicle must be placed outside.

Amatron

Refer to the Amatron setup guide for further instructions on setting up the Amatron, if not already done.

- 1. Turn on the Amatron. It's important the Amatron is turned on before the Matrix Pro GS.
- 2. Unfold the boom so the Amatron is unlocked.
- 3. Select the work screen.

Matrix Pro GS

Refer to the Matrix Pro GS user manual for further instructions on setting up and using your Matrix Pro GS for automatic boom section control.

- 1. Turn on the Matrix Pro GS console.
- Encode the number of sections and the width of each and other necessary settings like distance from antenna to boom, overlap% etc.
- 3. Wait for GPS signal and start a new job.
- 4. Set the BoomPilot mode to AUTOMATIC (Press the 📥 icon).
 - Matrix Pro GS status bar Icon will change to green ¹/₄
 - Amatron manual boom section keys on the work screen will disappear



Figure 9: Amatron work screen, when the Matrix Pro GS is in MANUAL mode


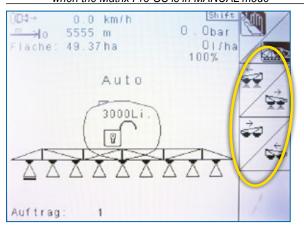


Figure 10: Amatron work screen

when the Matrix Pro GS is in AUTO mode

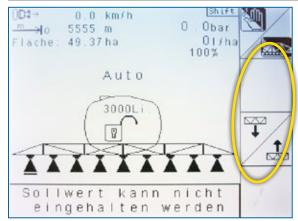

- 5. Drive forward (> 1.2 km/h).
- 6. Observe that all boom section valves open and the boom indication in the Matrix Pro GS shows ON (White)
- Check that the valves close when the master key is set to OFF in the Amatron, or by spraying over an applied area, check the boom indication in the Matrix Pro GS, shows OFF (Transparent).

Figure 8: Automatic to all booms on mode

BOOMPILOT[®] INSTALLATION MANUAL

A series of equipment-specific installation kits have been developed to work in conjunction with your automated boom section control system. This kit contains the necessary components and instructions to install BoomPilot on a Amazone Amatron+ / Amatron-3 controller. Please review this manual thoroughly before beginning the installation process.

BoomPilot[®]



TeeJet Aabybro Mølhavevej 2 DK 9440 Aabybro Danmark www.teejet.com

A Subsidiary of Spraying Systems Co."

98-05328-EN-A4 R0 English © TeeJet Technologies 2014