


SECTION DRIVE MODULE (SDM) MASTER SENSE UPDATE

In August 2025, the Matrix® 908 received a new software update (v1.52), featuring Last Pass Guidance Mode as the key enhancement.

This update is now available as a free download at www.teejet.com/resources/support/software.

As part of this update, the Matrix 908 requires the controller master switch to be in the **OFF** position when a job is opened before mapping is allowed. SDM harnesses with the master sense *jumped* (as shown in ❶ below) do not meet this requirement. The adapter cable in kit 90-03020 resolves this issue.

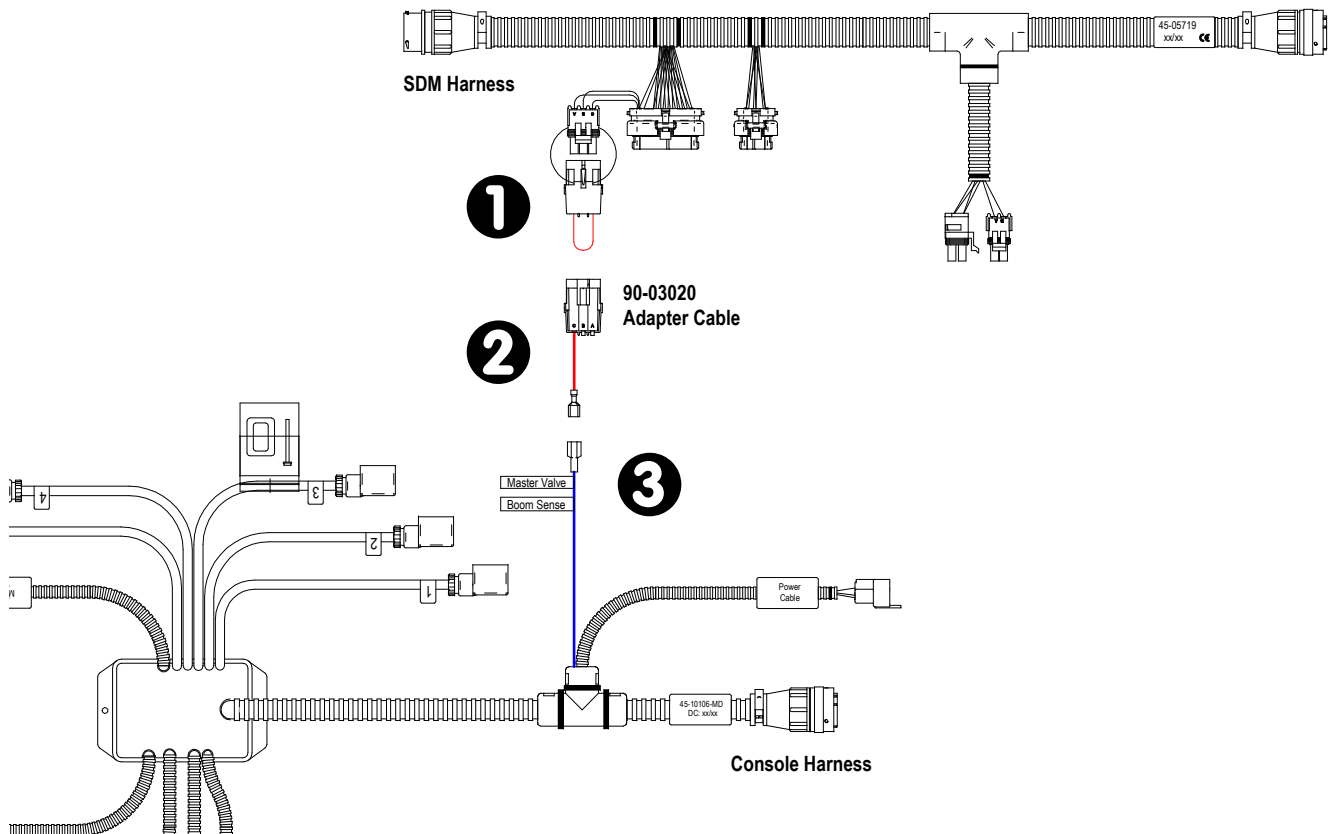

Installation Instructions:

1. Remove and discard jumper ❶.
2. Connect adapter cable 90-03020 ❷ to the mating connector that the jumper ❶ was removed from.
3. Connect the spade terminal at the other end of the adapter cable to the master boom sense ❸ on the controller main/console harness.